

FiberView

FV-3100

Quick Start

Software Installation

1. Insert the “FiberView Video Capture” CD in your computer’s CD-ROM drive.
2. Use the included mini-B USB cable to attach the FV-3100 microscope to a USB port on your computer.
3. Open the CD to view the files.
4. Click on the file “Setup.” This will start the FiberView software installation. Follow the on-screen instructions.
5. During the FiberView installation process, a second window will open. This is to install the Vimicro driver on your computer. Follow the Vimicro driver instructions.
6. When driver installation is complete, click “Finish”. You will return to the FiberView installation which will configure the driver and software before finishing the installation.
7. The complete User’s Manual (including step-by-step installation instructions) is available on the CD, or can be accessed through FiberView software’s [User’s Manual] button.
8. The CD may be removed from the computer at your convenience.


Using

Once you have installed the FiberView driver and software, use the included USB mini-B cable to connect the FV-3100 to your computer **(6)**. Click on the FiberView icon to open the software. (No image will be present if the software is opened first.)

After removing the protective tip cover, insert the fiber in the receptacle tip **(1)**, and use the Focus Knob **(4)** to achieve a preliminary focus.

Then use the adjustment knobs **(2)** and **(3)** to center the fiber.

Once centered, you may want to further improve the focus.

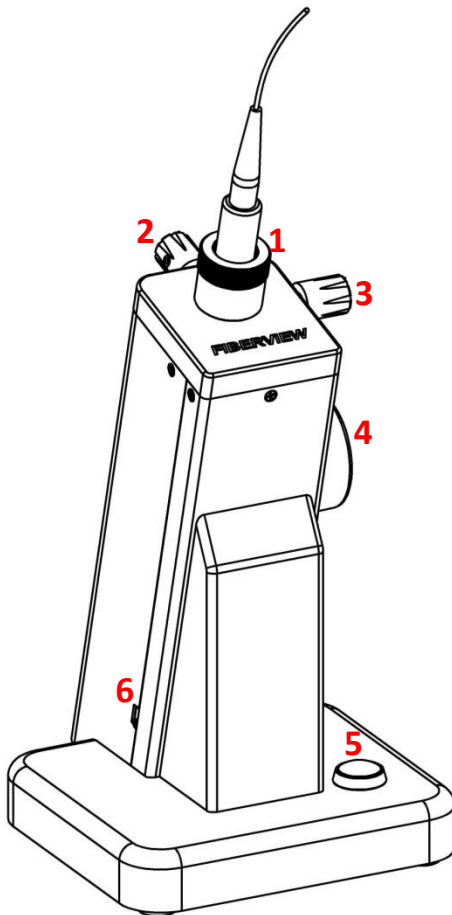

1. Fiber receptacle tip
2. Horizontal adjustment (X-axis)
3. Vertical adjustment (Y-axis)
4. Focus knob
5. Freeze Image button
6. USB2.0 (mini-B) port

Using the available features in FiberView software will enable you to more closely examine fiber details (Zoom), provide additional details and information in your reports (Notes) and easily organize and search through your reports (File Viewer) in addition to saving the image reports.